



LIGHT ELECTRONICS CO., LTD.



Carrier Tape Specifications (Loaded Quantity: 4000pcs/reel)

Moisture Resistant Packaging

Part No.


SL-T0603GEC020-L55

Page

7 of 8





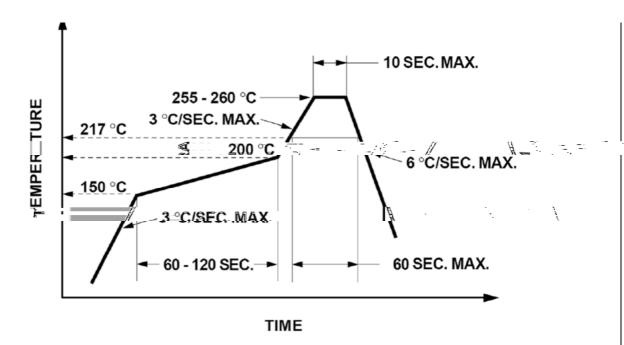


- 1. Reflow soldering should not be done more than two times.
- 2. When soldering, do not put stress on the LEDs during heating.

Soldering iron

- 1. When hand soldering, the temperature of the iron must less than 300°C for 3 seconds.
- 2. The hand solder should be done only once.

Repairing

Renair should not be done after the LEDs have been soldered. When repairing is unavoidable, a double-nead soldering from should be used (as below rigure). It should be confirmed beforehand whether the characteristics of LEDs will or will not be damaged by repairing.

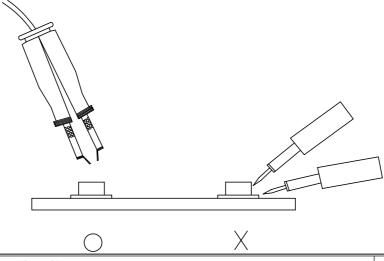

Part No. SI-T0603GEC020-1.55 Page Rof 8